



OWNER'S MANUAL FORERUNNER

HIGH-STEP



CONTENTS

1 Product Overview	2
la Package Contents	2
1b Product Overview	2
2 Assemble & Setup	3
2a Adjust Handlebar and Stem	3
2b Install Front Wheel	3
2c Seat Installation	3
2d Assemble Fender and Headlight	3
2e Mounting Pedals	4
3 Battery & Monitor Instructions	3
3a Charging Your Battery	3
3b Using Your Bandit E-Bike Monitor	4
3c Bandit Smart Color LCD Display	5
3d Menu Screen Elements	6
4 Safety Instructions	12
4a Riding Your E-Bike Safely and Responsibly	12
4b Charging your Battery in a Safe Way	13
5 Precautions	13
6 After Sales Policy	13
6a Warranty	14

1 PRODUCT OVERVIEW


1A PACKAGE CONTENTS

Remove all components from the packaging. Upon completing this, carefully inspect the contents of the box. Please contact customer service for support if any components are damaged or missing.

You should find the following items in the box:

- 1. Components for E-Bike
- 2. Battery and Charging Cable
- 3. Assembly Tools

1B PRODUCT OVERVIEW

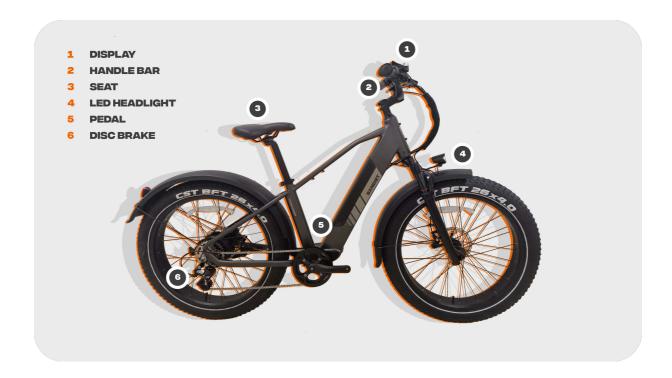

Display: Each Bandit E-Bike comes equipped with our re-designed smart color LCD displays for easier viewing during your ride. Please familiarise yourself with it before beginning to ride your Bandit E-Bike. **Handle Bar:** Adjust your handle bar before riding, ensuring it is correctly angled for maximal control and comfort. **Seat:** Before beginning to ride your Bandit E-Bike, be sure to adjust your seat so that the height and direction are optimal.

LED Headlight: The LED Headlight is best used for nighttime riding. The light can be switched on and off via the monitor by holding the "+" button.

Pedal: Use the correct wrench (15mm) to tighten the pedals. Inspect this component after every ride to ensure that the pedals are securely attached to the crankset.

Disc Brake: Please avoid touching the disc brake directly after riding. In case of damage, be sure to replace this component before continuing to use your E-Bike.

2 ASSEMBLE & SETUP

2A ADJUST HANDLEBAR AND STEM

- 1. Twist the stem 180deg so the headset is facing forward.
- 2. Remove the screws holding the mounting bracket in place.
- 3. Place the handlebar on the handlebar mount.
- 4. Re-install the mounting brackets. Ensure screws are tightly wound up.

2B INSTALL FRONT WHEEL

- 1. Prepare the quick-release handle and skewer.
- 2. Prepare the front wheel.
- 3. Flip the bike frame over for easy installation.
- 4. Place the front wheel on the front fork. Align the disk between the brake calliper.
- 5. Insert the skewer into the axel. Keep the handle on the left side nearest the disk plate.
- 6. On the other side, tighten the nut to secure the skewer into place.
- 7. Fasten the quick-release handle.
- 8. Ensure the quick-release handle is locked to complete front-wheel installation.

2C SEAT INSTALLATION

- 1. Twist counterclockwise to loosen the screw.
- 2. Insert the seat tube into the socket.
- 3. Adjust seat height and direction before re-tightening the screw.

4. Ensure the seat is securely held in place to complete seat installation.

2D ASSEMBLE FENDER AND HEADLIGHT

- 1. Remove the front and rear fenders.
- 2. Loosen the screw located at the top by twisting it counterclockwise.
- 3. Once the screw is loose, place the headlight directly on top of the front fender.
- 4. Re-install the screw to fasten the headlights and front fender together.
- 5. Repeat the same process for the rear fender.

2E MOUNTING PEDALS

Warning: Incorrect installation will cause damage. Please carefully read and follow the instructions. Ensure the pedals are secure before riding and re-tighten after every few rides.

- Identify and prepare the left and right pedals by their "L" and "R" markings.
- 2. The pedal "R" should be installed on the right side of the chainring while pedal "L" should be installed on the left.
- 3. Install pedal "R" by twisting it clockwise.
- 4. Install pedal "L" by twisting it counter-clockwise.

Note: Hand screw the pedals to get the thread started. Afterwards, use your 15mm wrench to tighten them.


3 BATTERY & MONITOR INSTRUCTIONS

3A CHARGING YOUR BATTERY

- 1. Flip open the flap and plug the wire into the socket to begin charging.
- 2. The battery can also be removed for charging by using the provided key to release it from its slot.
- 3. Plug the charger into a power source.
- 4. A red light shows that the battery is being charged while green means it's full.

3B USING YOUR BANDIT E-BIKE MONITOR


- 1. **Power on/off:** Hold the power button for 2 seconds to power up the bike. Hold it for 3 seconds to power off. Tap the power button to switch drive modes between "Front", "Rear", "Auto", and "Max". (This feature is only available on Dual Wheel Drive models)
- 2. **Assisted Pedalling:** Press the "+" or "-" button to adjust the assist level from 0 to 6 (level 7 is available for Dual Wheel Drive models). When your assist level is at 0, press and hold "+" for 2 seconds to enable a short 6km/h (3.8mp/h) speed boost.
- 3. **Headlight Control:** Press and hold "-" button for 2 seconds to switch on or switch off the headlight.
- 4. **Error Code Display:** When the electric control system fails, the meter will display an error code automatically. See the table for more information.
 - When an error code is displayed, you should use it to troubleshoot the E-Bike.
- 5. **"Set" Button:** Press the "set" button to switch range, trip time, AVG speed, and trip distance. Hold the button to enter the menu.

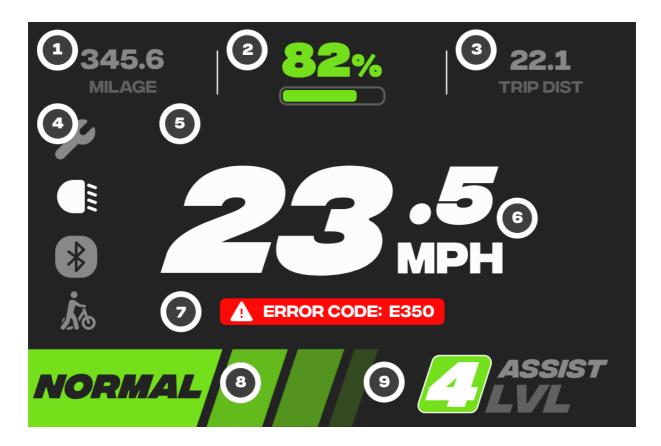


3C BANDIT SMART COLOR LCD DISPLAY

- 1. **Total remaining mileage:** Estimated remaining mileage based on current battery life. The same unit of measure that the user selects will be used.
- 2. Battery display: Accurately displays percentage remaining battery.
- 3. **Average speed per trip:** Calculates your average speed based on travel distance and time taken.
- 4. **Utilities Display:** From top to bottom: Repairs Needed, Headlight Activation, Bluetooth Connection Status, Boost Activation.
- 5. **Speedometer:** Accurately displays the rider's speed of travel.
- 6. **Unit of measure for speedometer:** Displays the user's preferred unit of measure for speed.
- 7. Error display area: Errors messages will appear here.
- 8. **Power Output Level:** Displays whether the rider is using Sport, Eco, or Normal Modes.
- 9. Pedal Assist level: Displays the rider's selected level of Pedal Assist.


3D MENU SCREEN ELEMENTS

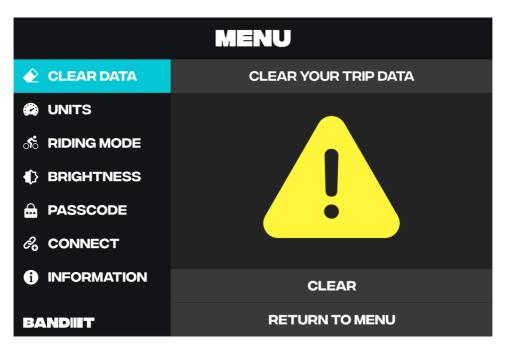


Clear Data: Clear riding data for your last trip here.

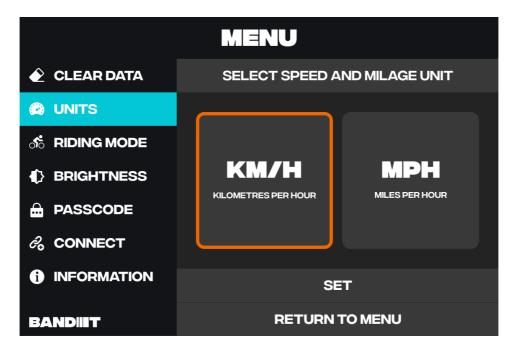


Units: You can adjust the unit of measure for speed here. The default measure is in mph.

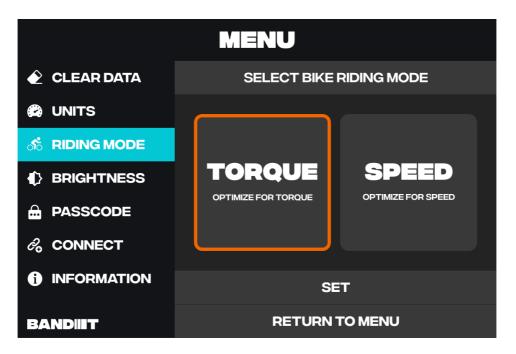


Riding Mode: You can switch to your preferred Riding Mode here (Torque, Speed). The default Riding Mode is 'Torque'.

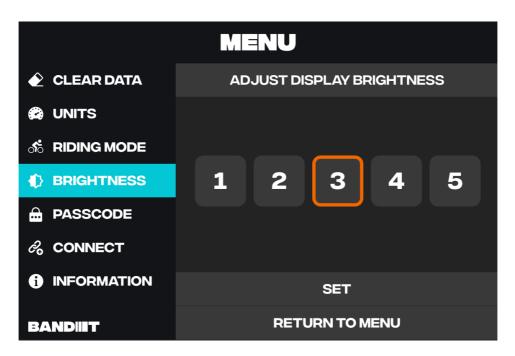


Brightness: Adjust your display's brightness level here. Brightness levels range from 1-5.

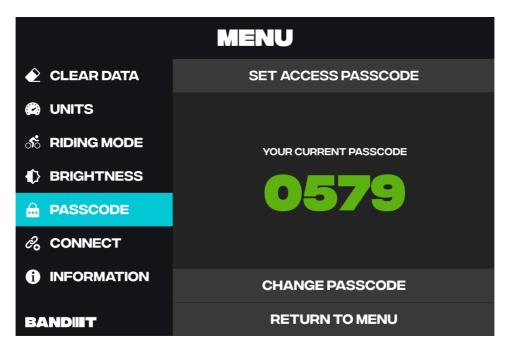


Passcode: Set your passcode here. By default, the passcode is 0000. You can also bind your NFC card with a passcode.

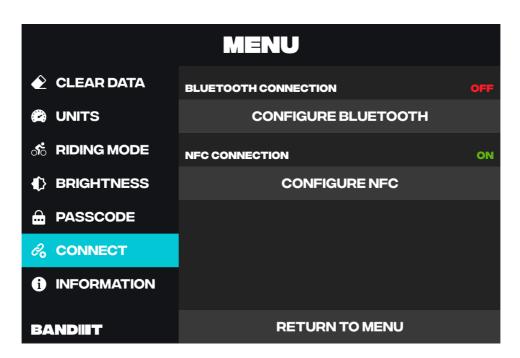


Connect: You can connect your monitor to an NFC card or to a mobile device via bluetooth here.

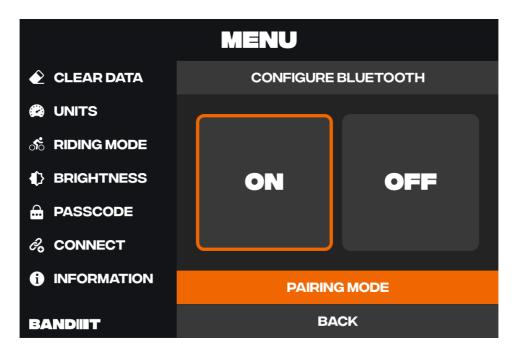

Connect With Bluetooth: Connect your Bandit E-Bike with your smartphone to optimise your ride experience using the Bandit App.

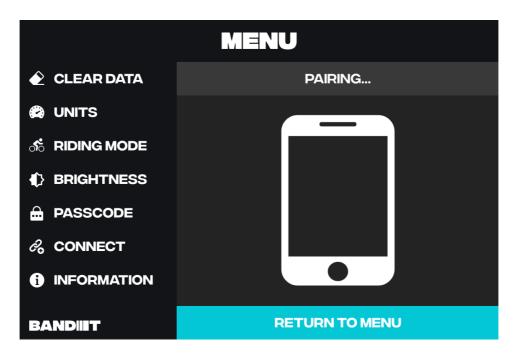

Using your monitor, search for your smartphone. Once it appears, select it to begin the pairing process.

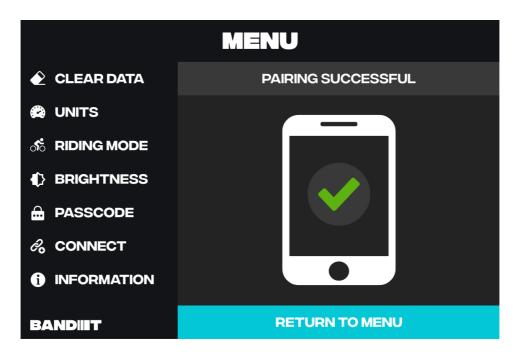


Once pairing is completed, you will receive a confirmation message. After this, you can use the Bandit App to customise your E-Bike further.

MENU				
🔶 CLEAR DATA		BIND NFC T	'AG	
🛱 UNITS	NFC 1	FB9DB721	DELETE	
	NFC 2	FB9DB721	DELETE	
BRIGHTNESS	NFC 3	FB9DB721	DELETE	
Descode	NFC 4	EMPTY	BIND	
& CONNECT	NFC 5	EMPTY	BIND	
BANDIIIT		BACK		

Connect with NFC Card: Connect your Bandit E-Bike with an NFC card to unlock your E-Bike more easily. You can have up to 5 NFC cards. Press 'Bind' To begin the pairing process.



Place your NFC Card on the monitor to begin the pairing process.

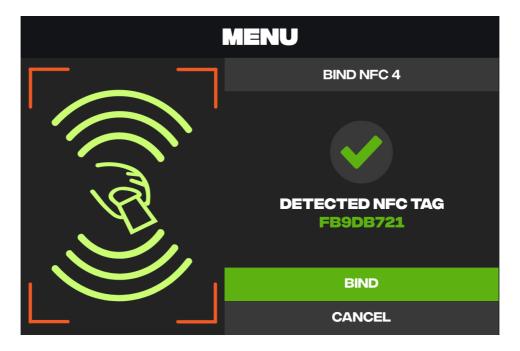

A confirmation message will appear when the pairing process has successfully completed.

	MENU	
🔶 CLEAR DATA	BIKE INFORMATION	
🖨 UNITS	WHEEL DIAMETER 10 INCHES	MOTOR SINGLE MOTOR
	MONITOR HARDWARE VERSION 0.1.12	MONITOR SOFTWARE VERSION 0.2.43
♠ BRIGHTNESS	BATTERY INFORMATION	
BASSCODE	CURRENT TEMPERATURE	RELATIVE SOC 1%
	total voltage 1 mV	FULLCHARGE SOC 1%
	NEXT PAGE	
BANDIIIT	RETURN TO MENU	

Information: Access basic information about your E-Bike here.

4 SAFETY INSTRUCTIONS

4A RIDING YOUR E-BIKE SAFELY AND RESPONSIBLY

- 1. Do not violate traffic laws or ride your Bandit E-Bike carelessly. Proceed with caution, maintain a safe speed and distance from other vehicles, people, and objects, and avoid riding on slippery or bumpy surfaces.
- 2. Respect pedestrians' right of way and their space. When riding behind a pedestrian, ring the bell to alert them to your presence. When passing pedestrians, maintain a manageable speed and distance. If the roadway does not facilitate safe passing conditions, get off the bike and walk past the pedestrian.
- 3. Inspect parts before and after each ride. In case of damage, make the appropriate adjustments and repairs before the next ride to prevent endangering your own and other people's safety.
- 4. Ensure that you turn off your Bandit E-Bike when you dismount. This prevents accidents caused by pedal assist being activated when you remount.
- 5. Wear the appropriate attire and footwear while riding the bike to avoid injury. Avoid loose-fitting clothing, open-toed, loose-fitting footwear, or anything that may easily get caught in the bike's mechanisms.

4B CHARGING YOUR BATTERY IN A SAFE WAY

- The battery's standard charging time is 3-7 hours. You should immediately unplug the battery when it indicates it is fully charged. Although this charger has an overcurrent protector, it should not be charged for a long time due to the chemical nature of the lithium battery. Failure to abide by this consideration may result in reduced battery performance and may even cause a fire.
- 2. If the temperature exceeds 104°F (40°C), suspend charging until the temperature drops. During the winter, it is recommended to charge the battery 30 minutes after the bike is built. Charging times will be extended to 4-9 hours.
- 3. To avoid rapid battery decay, pay attention to the charger's acceptable voltage before charging.
- 4. While charging, if an odour or smoke is emitted, or the shell is overheating, suspend charging immediately. The defective component should be replaced or repaired before proceeding.
- 5. During storage and charging, be aware of potential orifices where foreign liquids can enter the battery or other bike mechanisms. Place the E-Bike in a dry, cool, and confined environment.

5 PRECAUTIONS

We know you are excited to start riding your Bandit E-Bike but please:

- 1. Charge and Re-insert the battery before riding.
- 2. Make sure the pedals are screwed on tightly.
- 3. Ensure the front wheel is installed tightly and securely.
- 4. Check that the tires are sufficiently inflated.
- 5. Learn how to use the Bike Monitor.
- 6. Wear a helmet before beginning your ride.
- 7. Be sure to check road conditions before riding, wet or bumpy roads should be avoided.

Please Note: For an optimal experience, be sure to adjust your Bandit E-Bike to suit your individual needs following assembly.

6 AFTER SALES POLICY

6A WARRANTY

- 1. Users should operate their E-Bike in accordance with the product manual. In case of product faults, the company must carry out repairs and maintenance.
- 2. The company is responsible for the after-sales faults and will perform the needed repairs and maintenance for a fee.
- 3. If battery replacement is required following the end of the warranty period, the company will supply a replacement to the buyer at factory price.



SCAN ME VIDEO TUTORIAL

BANDIT TECHNOLOGIES INC.

200 CONTINENTAL DRIVE SUITE 401, OFFICE 434 , NEWARK, DE19713, USA

FOR PRODUCT RELATED QUESTIONS PLEASE VISIT:

https://banditbikes.zendesk.com

or

support@bandit.bike

0	OFFICIAL_BANDIT_BIKES
Ն	BANDIT_BIKES
f	BANDIT_BIKES
	BANDIT_BIKES
y	BANDIT_BIKES
	BANDIT.BIKE
	BANDIT_BIKES

ROAM YOUR WAY.